


# ROGUE INSTRUCTION MANUAL SUPPLEMENT

## The Choice of Professionals


- 1. Using the Magnetic Adjustment Straps
- 2. Easy On/Off action of the Muzzle
- 3. Adjusting the angle of the Muzzle
- 4. Muzzle liner and Breath Box options

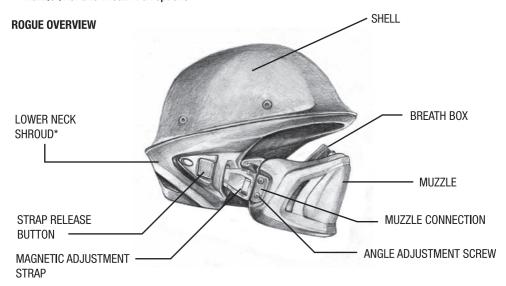

#### 1.1 Using the Magnetic Adjustment Straps for a perfect fit

The Rogue helmet requires a one-time set up of the Magnetic Adjustment Straps for a proper fit. There are Left & Right straps that require independent adjustment. Be sure that if the Left side is pushed in three clicks that the Right side is also pushed in three clicks. The Adjustment Straps should not be uneven (Figure 1). If you accidentally pull the straps out, it is easy to put them back in again. Simply slide the Adjustment Strap through the lower neck shroud slot as shown in (Figure 2). Take care to ensure that the strap is properly aligned with the receiving buckle. If done properly, an audible click will be heard. The Adjustment Strap can be pushed in up to 7 clicks. Smaller faces normally require 5-7 clicks while larger faces usually require 1-3 clicks. If re-adjustment is needed, simply push the Strap Release Button and pull the strap back out the necessary number of clicks.



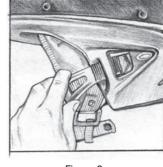

ure 1 Figure 2

 ${\hbox{NOTE: -Longer straps are available if there is not enough adjustment with stock straps.}}$ 

### 2.1 Easy On\Off action of the Muzzle

Now that the Adjustment Straps are positioned correctly and set to the target length, put the helmet on and confirm the Muzzle is in a comfortable position. Simply hold the Muzzle in the correct position (Figure 3) with both hands and guide the Muzzle connection points to the Adjustment Strap receivers. Once the two components get close, magnets will lock the Muzzle to the helmet. Some riders may prefer the Muzzle to be against the face while others may prefer to have a gap. To make adjustments please refer to 1.1 and re-adjust the straps.



Figure 3

2.2 EASY OFF: To remove the Muzzle place fingers on left & right side edges of Muzzle and with thumbs under the bottom edge, lift the Muzzle UPWARDS until the attachment points clear the Adjustment Straps as shown (Figure 4).

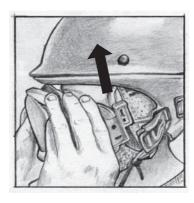


Figure 4

2.3 QUICK CONNECT: It is best to leave the Adjustment Straps on the helmet in the rider's ideal position. This will all for quick attachment and removal of the Muzzle throughout the day.

!\ WARNING-Never remove the Muzzle while the motorcycle is in motion.

#### 3.1 Adjusting the Muzzle Angle

Once the Muzzle length has been set, the angle may be adjusted as well. To adjust the Muzzle angle, simply use a flat-head screwdriver and loosen the lower angle adjustment screws slightly (do not remove). Now place the Helmet on your head, attach the Muzzle shown (Figure 5) and make the necessary angle adjustments. Take the helmet off and tighten the Angle Adjustment Screws so the angle position is locked into place.





Figure 5

#### 4.1 Muzzle Liner vs. Breath box

The Rogue helmet ships with the Breath Box installed in the Muzzle. Some riders may prefer the full coverage of the Breath Box, which is similar to wearing a bandana or mask over the lower face. Other riders may prefer to have more air flow and will want to switch to just the Muzzle liner. To remove the Breath Box from the Muzzle simply pull the breath box assembly away from the rubber Muzzle component as show in (Figure 6). To reinstall the Muzzle liner, simply align the cutouts and place the liner against the Muzzle surface, pushing evenly across the entire surface (Figure 7).

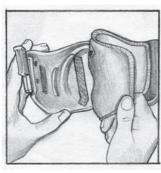


Figure 6

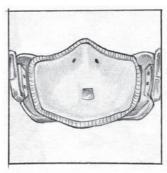


Figure 7

**Bell Powersports** 5550 Scotts Valley Drive Scotts Valley, Ca 95066 tel. 831-461-7500

**Customer Service** 735 Pacesetter Drive Rantoul, IL 61866 tel. 800-776-5677

- THE BELL ROGUE HELMET MEETS DOT FMVSS No. 218 REQUIREMENTS
- THE LOWER SHROUD IS NOT ADDED FOR SAFETY
- THIS HELMET IS DOT CERTIFIED AS AN OPEN FACE HELMET
- BELL ROGUE MUZZLE IS NOT INTENDED TO PROTECT THE RIDERS FACE IN THE EVENT OF AN IMPACT. • BELL ROGUE MUZZLE WILL HELP REDUCE DEBRIS, BUGS AND OTHER FOREIGN MATTER FROM HITTING THE FACE.
- THE INNER BREATH BOX IS USED FOR COMFORT AND ENVIROMENTAL PROTECTION



